



[Throttle Body Inlet Hose, B8 Audi S4/S5 3.0TFSI](#)



**Supplied Parts:**


- 034Motorsport B8 Audi S4/S5 3.0 TFSI Throttle Body Inlet Hose

**Tools Needed:**

- Hands (2) (*Opposable thumbs are optional*)
- Flathead Screwdriver or 7mm Hose Clamp Driver

**Step 1** – Pull the hood release latch inside the passenger compartment, then open the hood.

**Step 2** – Observe the stock throttle body inlet tube in its natural habitat. Take a peek at the picture below.

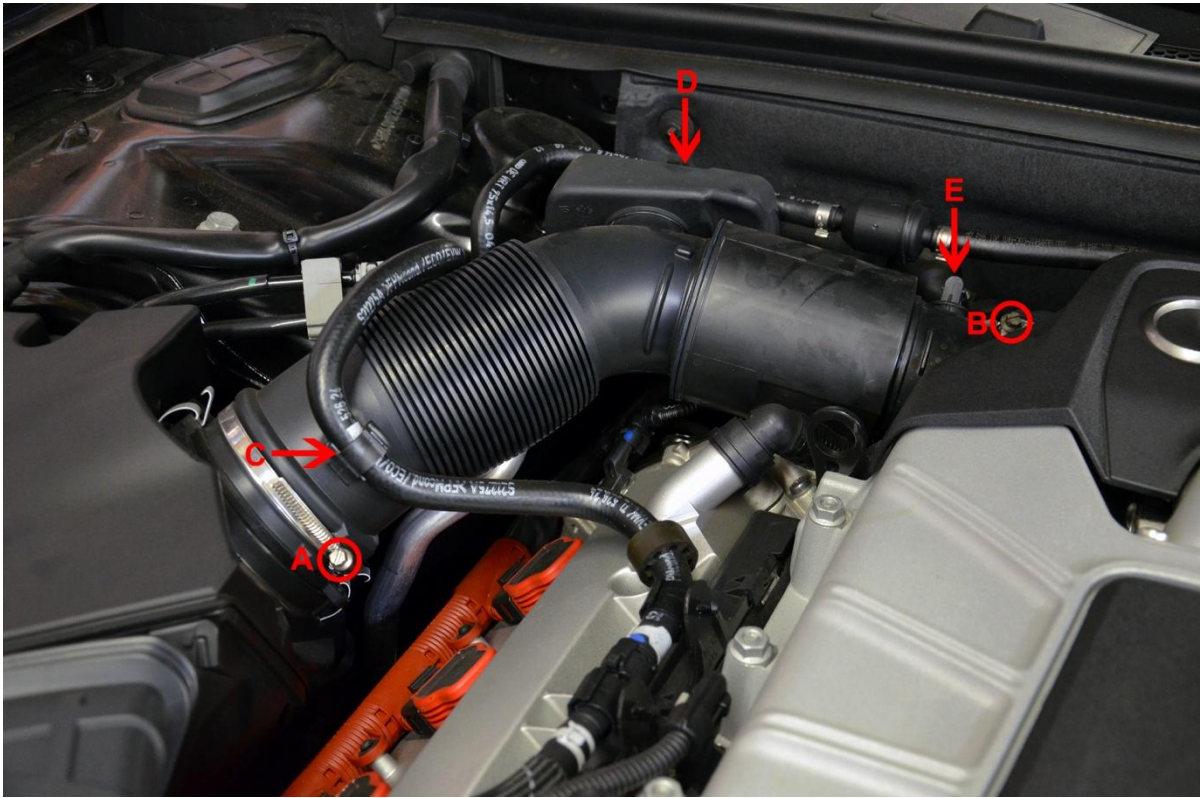

**Step 3** – Use flathead screwdriver or hose clamp driver to loosen the hose clamps, labeled A and B.

**Step 4** – Remove the hoses labeled C and D from the clips in the stock throttle body inlet tube.

**Step 5** – Pull the small vacuum hose labeled E off of the 90 degree nipple in the stock throttle body inlet tube.




**Step 6** – Remove the stock throttle body inlet tube from the throttle body and airbox, and set aside.

**Step 7** – Install the stock hose clamps onto the 034Motorsport Silicone Throttle Body Inlet Hose. You may have to loosen them further in order to do this.



**Step 8** – Install the 034Motorsport Silicone Throttle Body Inlet Hose onto the throttle body and airbox.

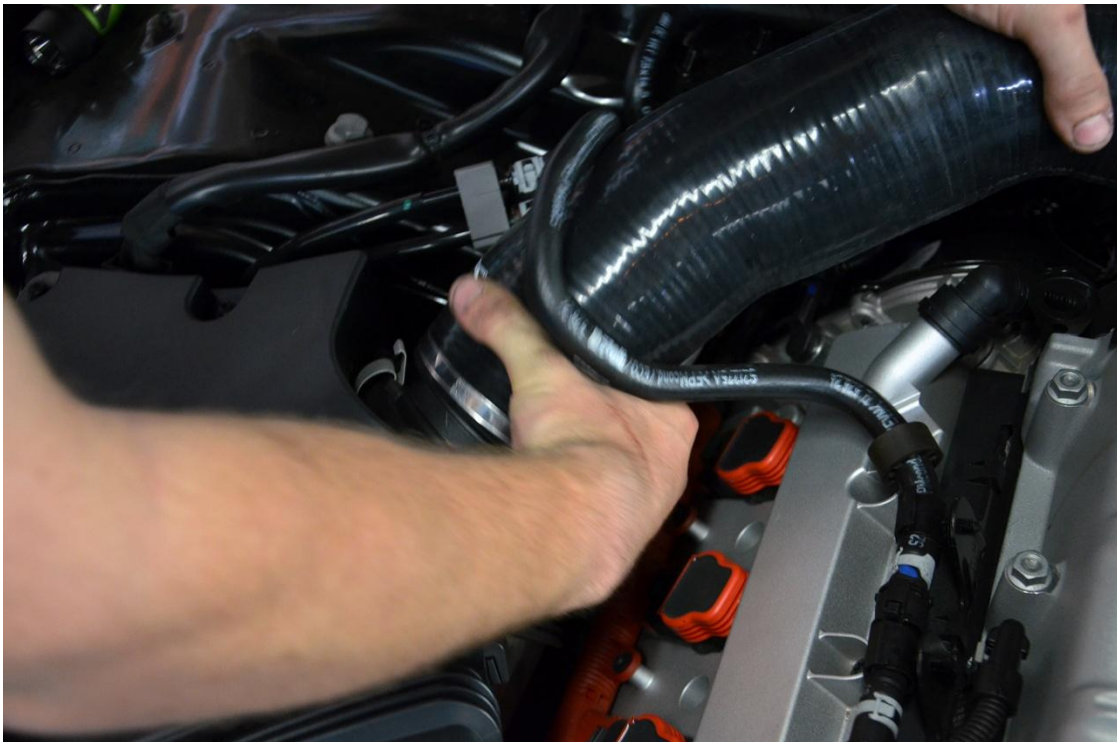




**Step 9** – Attach the small vacuum hose from Step 5 onto the new 90 degree nipple in the 034Motorsport Silicone Throttle Body Inlet Hose.



**Step 10** – Tighten both hose clamps at the throttle body and airbox.



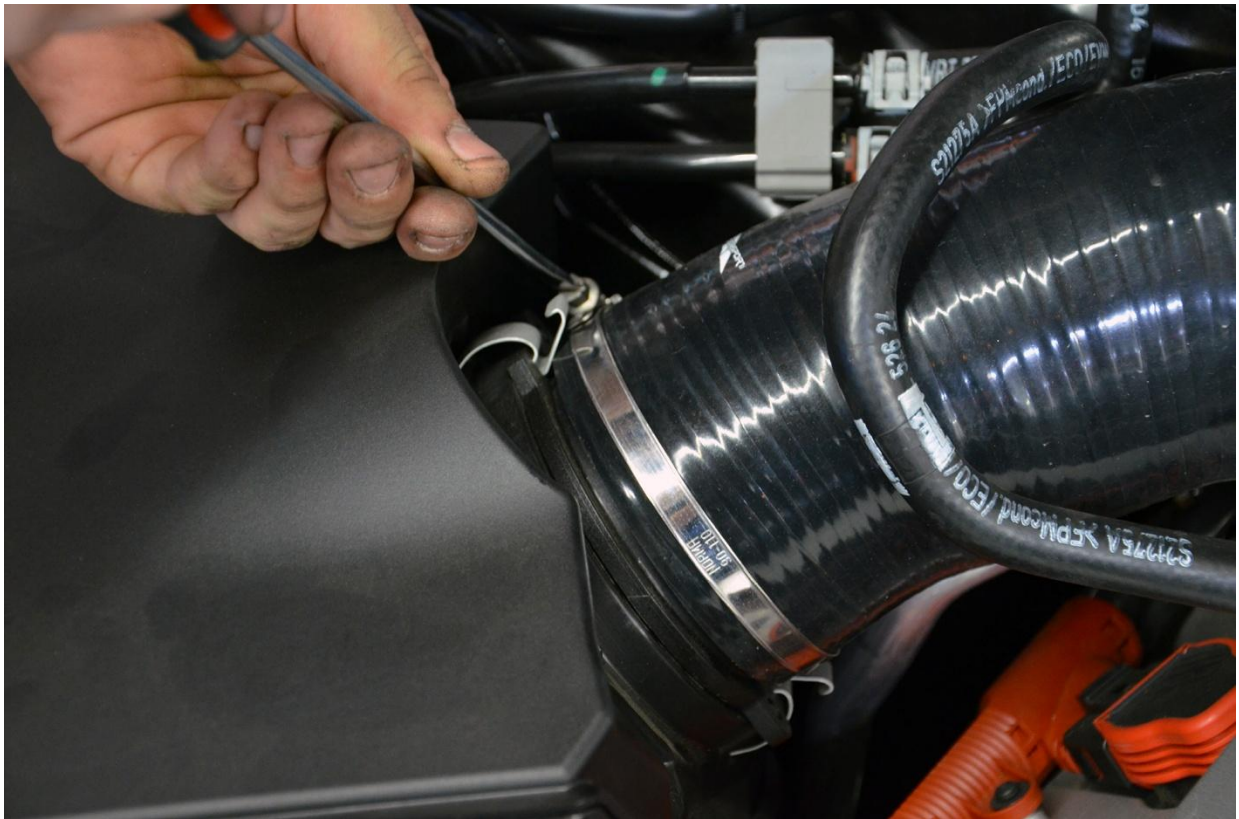

**Step 11** – Admire your work!

