

**RES-X RESONATOR DELETE AND X-PIPE, B8/B8.5 AUDI S4
3.0 TFSI****034 MOTORSPORT**

The 034Motorsport Res-X Resonator Delete and X-Pipe for your B8 Audi S4 3.0T unleashes a throaty growl and exotic tone that exudes the sound of performance and warns bystanders that this isn't your average family sedan.

*This job requires cutting the stock exhaust. Be sure to double check that your cut line will match the factory tip location

Installation Spiciness Rating: Mild

Installation of your 034Motorsport Res-X is a straightforward process that will take approximately one hour to complete.

Supplied Parts:

- (1x) 034 Res-X
- (2x) exhaust clamps

Tools Needed:

- 13mm socket
- 16mm socket
- Sawzall
- Safety glasses
- Marker

About This Guide

This Install Guide documents the installation process on an B8 Audi S4. There may be minor differences depending on specific vehicle, market, options, etc.

Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

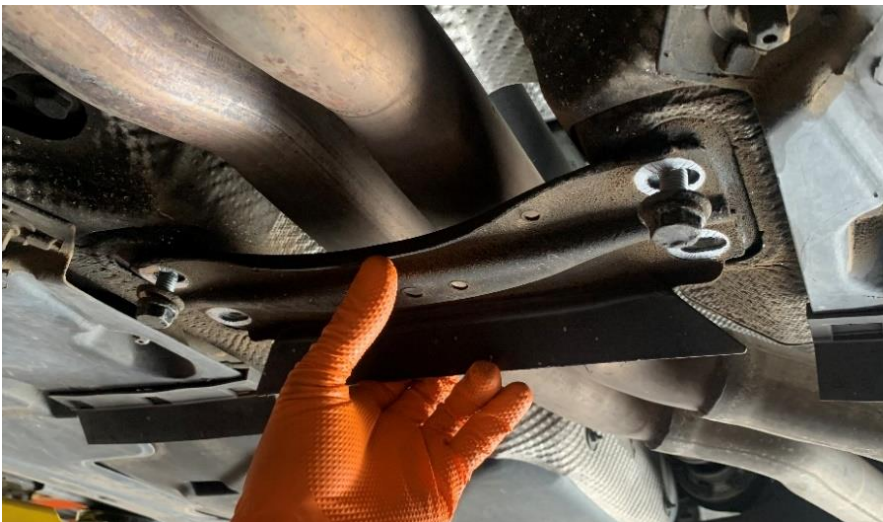
customerservice@034motorsport.com

Step 1

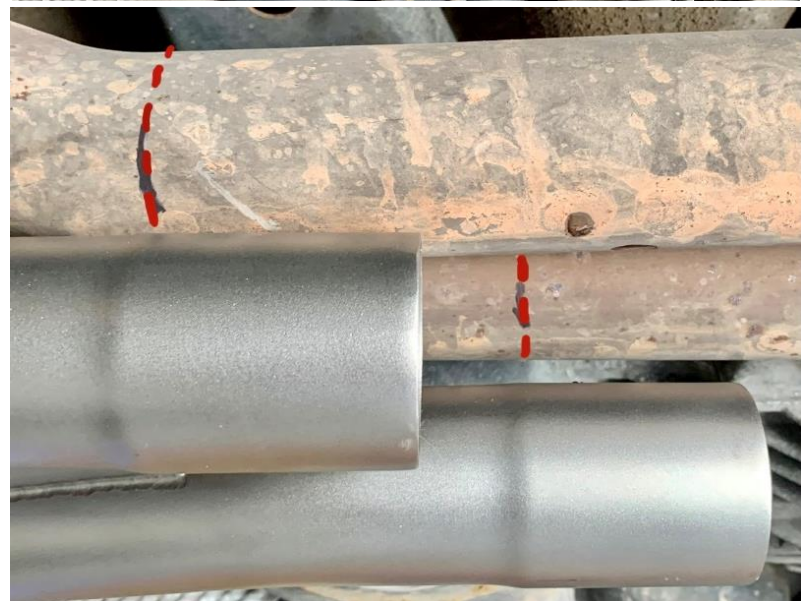
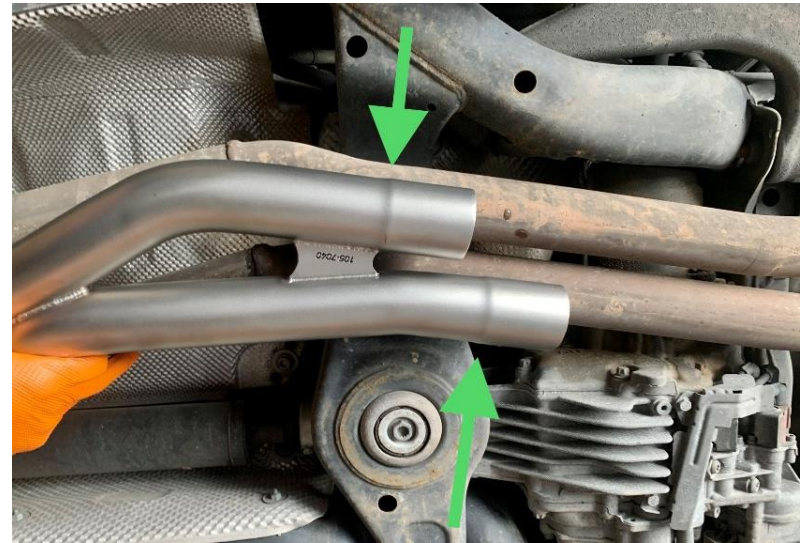
Raise the vehicle securely to gain access to the underside of your car.

**Step 2**

Using an 16mm socket, remove the bolts securing the chassis brace.

**Step 3**

Place the new Res-X mid-pipe under the factory unit as a reference for where to cut. Mark the stock exhaust just shy of where the flares begin on the Res-X unit.

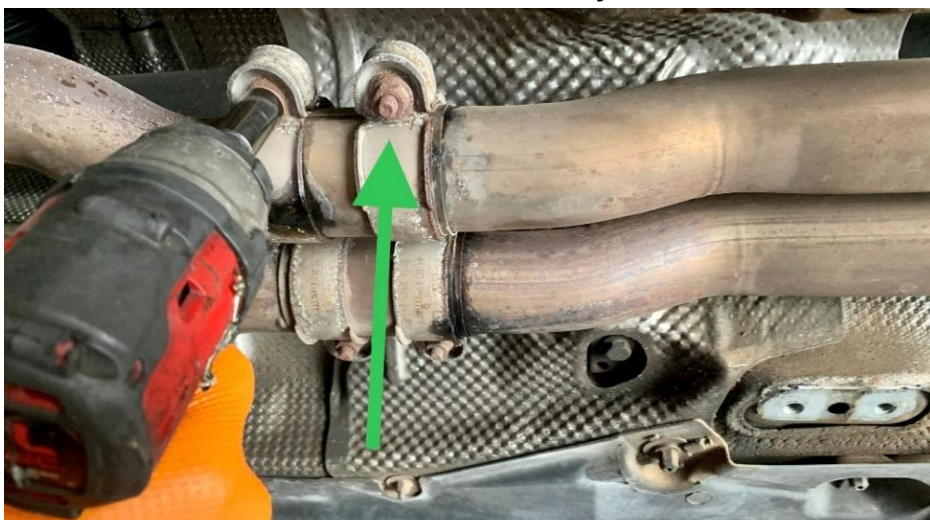


Step 4

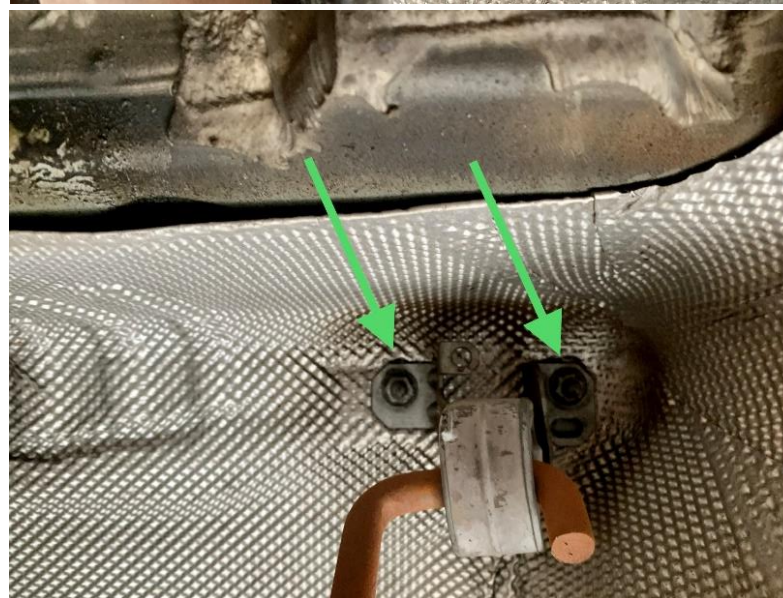
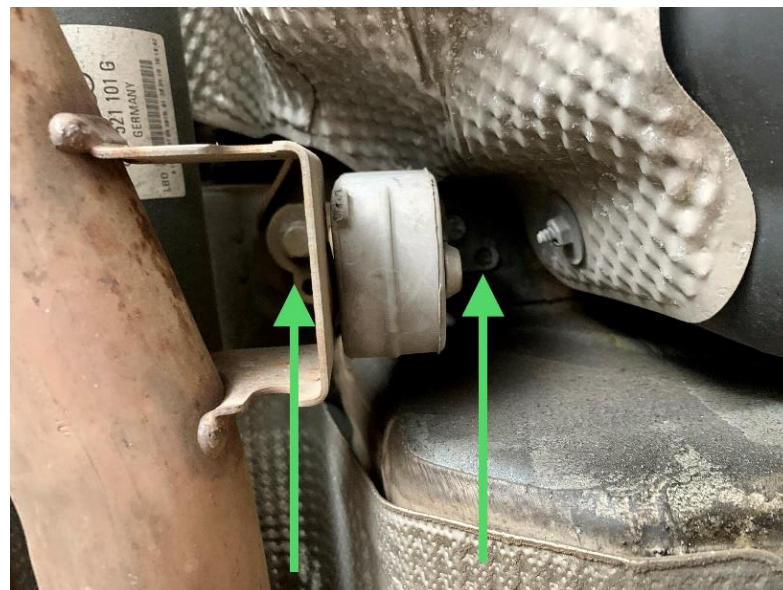
Make your cuts, carefully, either on or off the car. Protect your eyes!

**Step 5**

Remove the freshly cut factory exhaust by loosening the (4x) 13mm bolts at the exhaust junction.

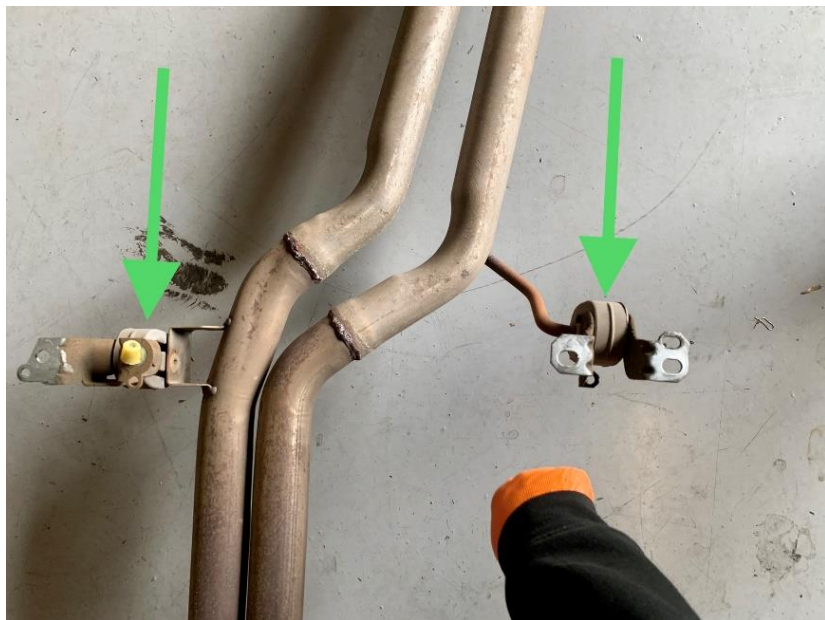
**Step 6**

Using the same 13mm socket, remove the exhaust hanger hardware.

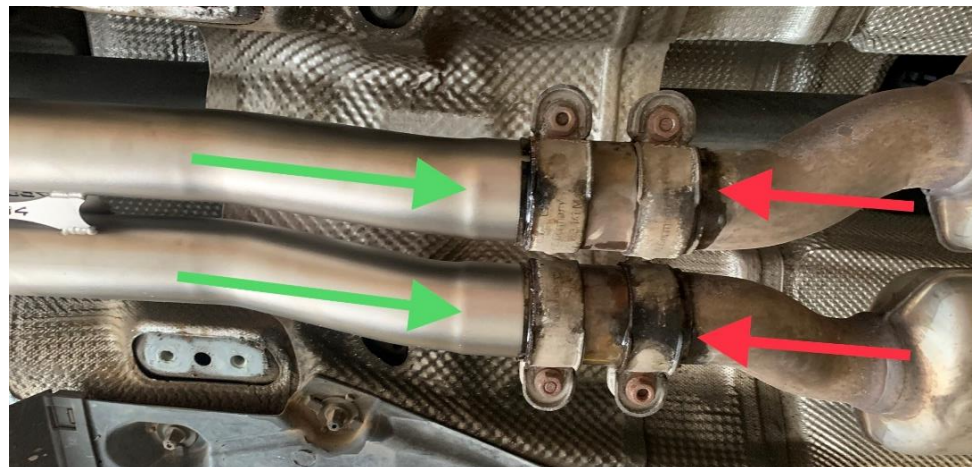


Step 7

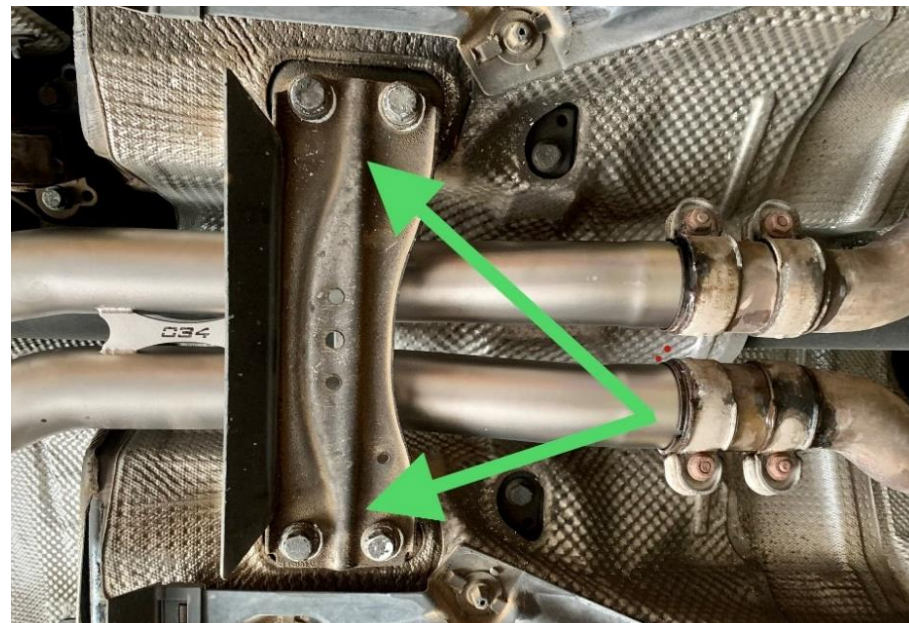
Transfer exhaust hanger bushings and brackets to the Res-X.

**Step 8**

Slip the Res-X unit into the downpipes and tighten the 13mm nuts.

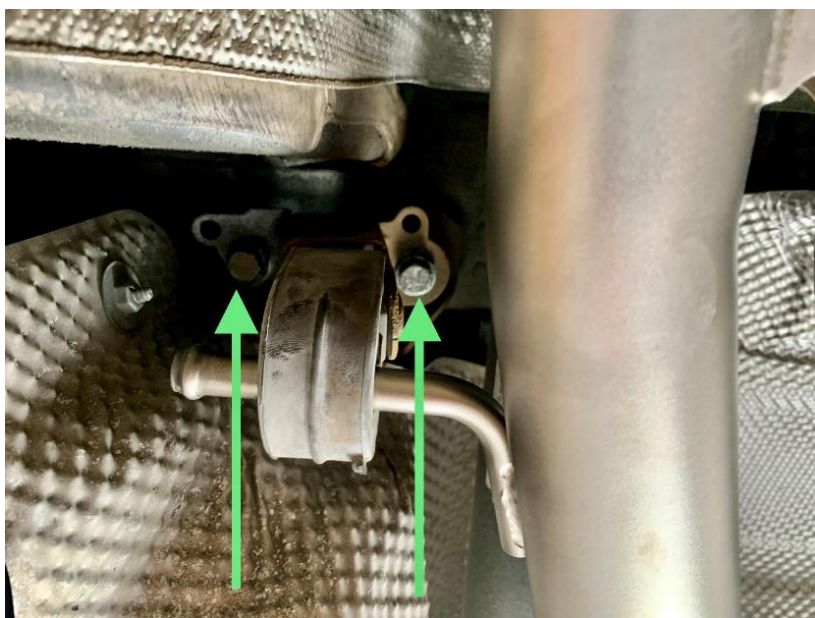
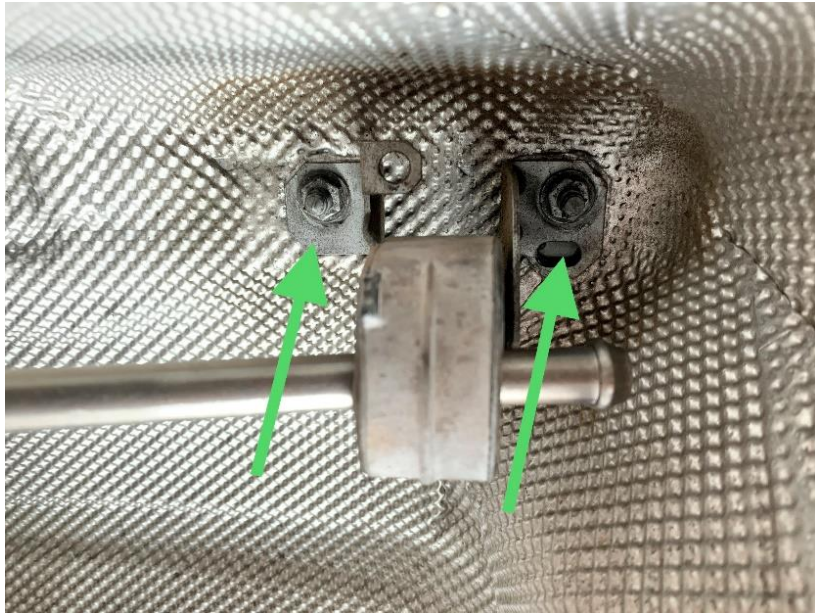
**Step 9**

Reinstall the chassis brace.

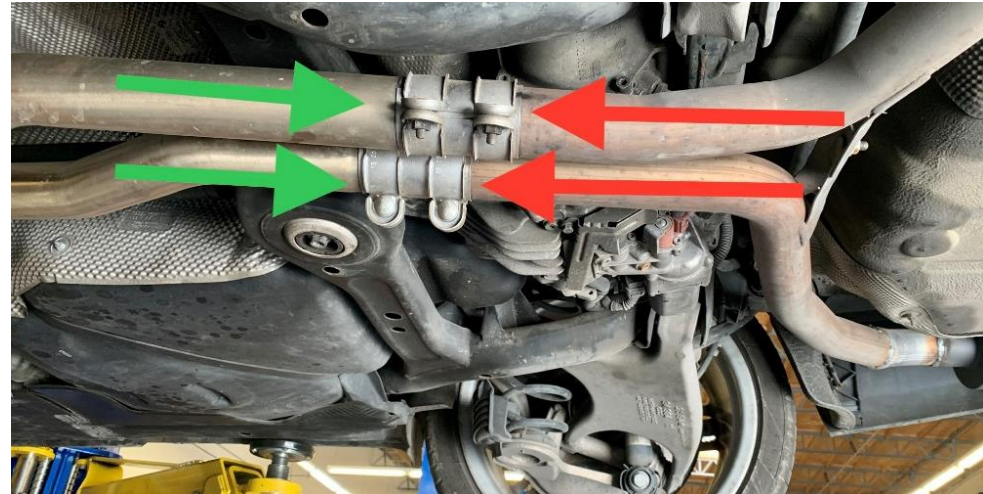


Step 10

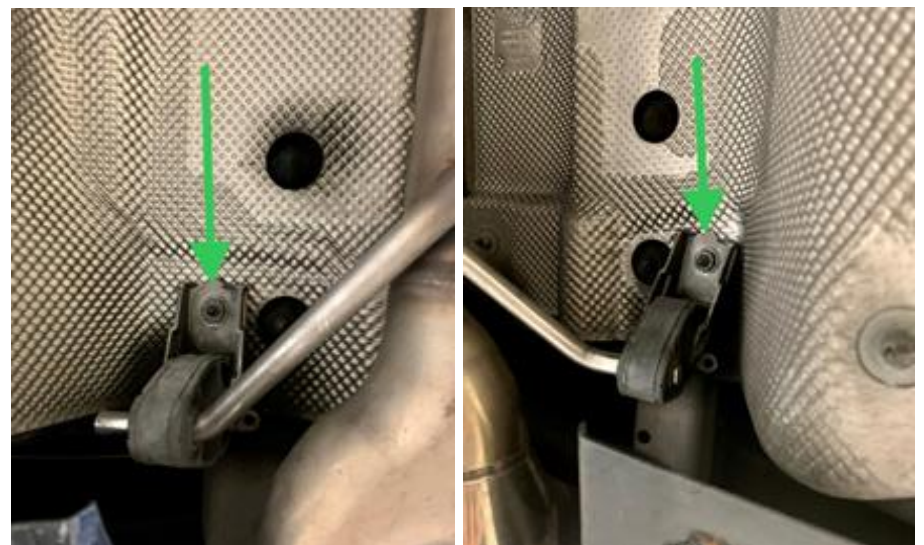
Reattach exhaust hanger brackets to car.

**Step 11**

Insert exhaust tip piping into Res-X ends using the provided slip-on exhaust clamps.

**Step 12**

Remount exhaust tip section to the exhaust hanger provisions.



Step 13

Enjoy your new exhaust sounds.

