

[034Motorsport MQB Insuction Bundle](#)

034Motorsport's MQB Insuction Bundle is the new standard in performance. This kit was engineered with performance in mind. Manufactured from powder coated aluminum and reinforced silicone; for high flow, strength, light weight, and long lasting reliability. The high-flow, double-layered cotton filter can trap particles as small as 5 microns and has superior filtration over the factory paper filter.

Installation Spiciness Rating



(Mild)

Installation of your 034Motorsport MQB Insuction Bundle is a straightforward process that will take approximately 30 minutes to complete.

Supplied Parts:

- 034Motorsport Turbo Inlet
- M8 socket head cap screw
- 034Motorsport Turbo Inlet Hose
- (2) hose clamps
- 034Motorsport Performance Panel Air Filter

Tools Needed:

- 7mm socket
- 8mm socket
- Hose clamp pliers
- T25 Torx
- T30 Torx
- Phillips head screwdriver
- 6mm Allen wrench
- Two hands, and most of your fingers

About This Guide

This Install Guide documents the installation process on a 2015 Audi S3, a 2015 and a 2018 VW Golf GTI. There may be minor differences with other vehicles, depending on specific vehicle, market, options, etc.

Getting Started

- Ensure you have all parts and tools required for installation by reading the complete Install Guide.


Step 1

Open Hood




Step 2

Using a Phillips head screwdriver, or appropriate socket, loosen the hose clamp holding the intake to the turbo inlet.

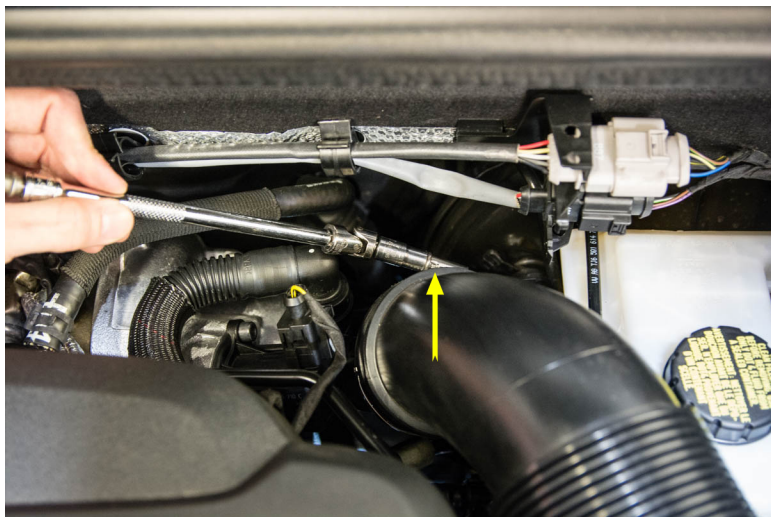

Step 3

Remove the breather hose from the left side of the airbox.

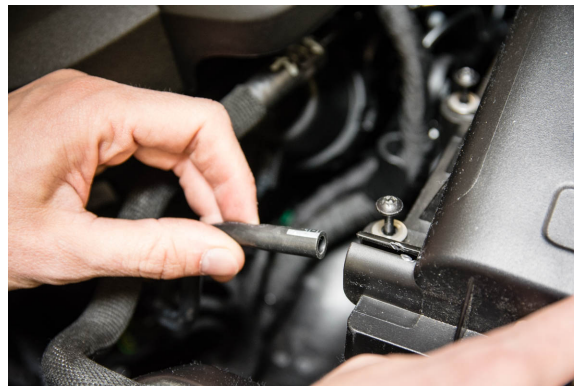

Step 3A

For Golf, GTI, and A3 owners, disconnect the SAI connector on the side of the airbox.



Step 4

Using a T25 Torx, remove the upper airbox screws.



Step 5

Remove the upper airbox and stock air filter.



Step 6

Using a T30 Torx, remove the screw holding the stock turbo inlet.




Step 7

Take a hold of the turbo inlet, and turn clockwise to disengage from turbo.



Step 8

Disconnect breather hose from inlet. It will be either a pinch type connector, or a friction snap-on. The pinch connector is easy to remove, while the friction snap-on will require effort; pulling while simultaneously rocking the connector is usually the best way to remove.

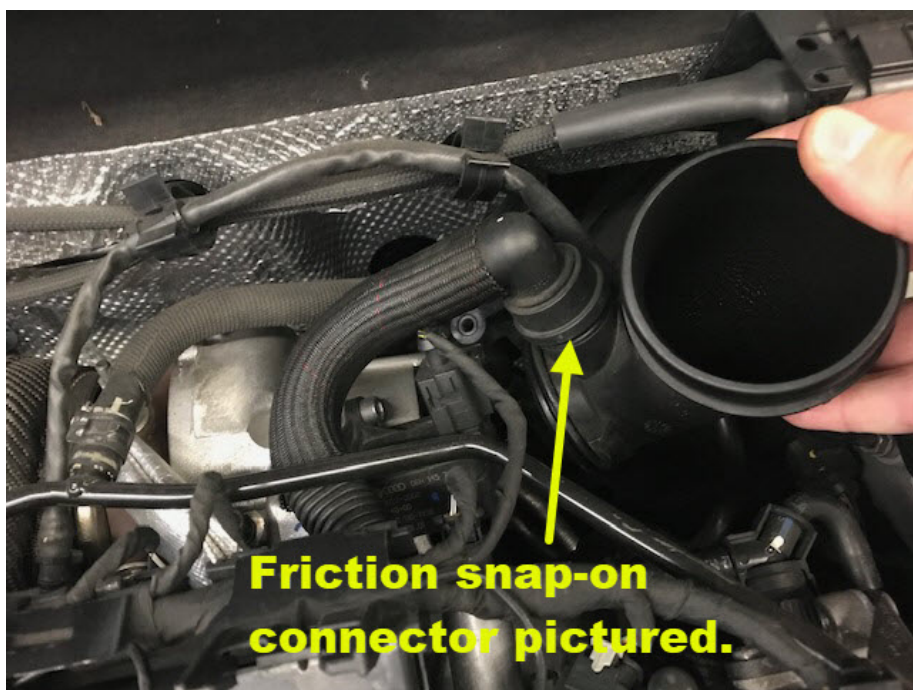

Step 9

Apply a small amount of Blue Loctite to the supplied M8 socket head cap screw.



Step 10


Install the 034Motorsport Turbo Inlet. Connect the breather hose (it will click in).

Torque the M8 socket head cap screw to 9NM (6.5 ft-lbs).



Step 11

Install the Performance Drop-In Air Filter.

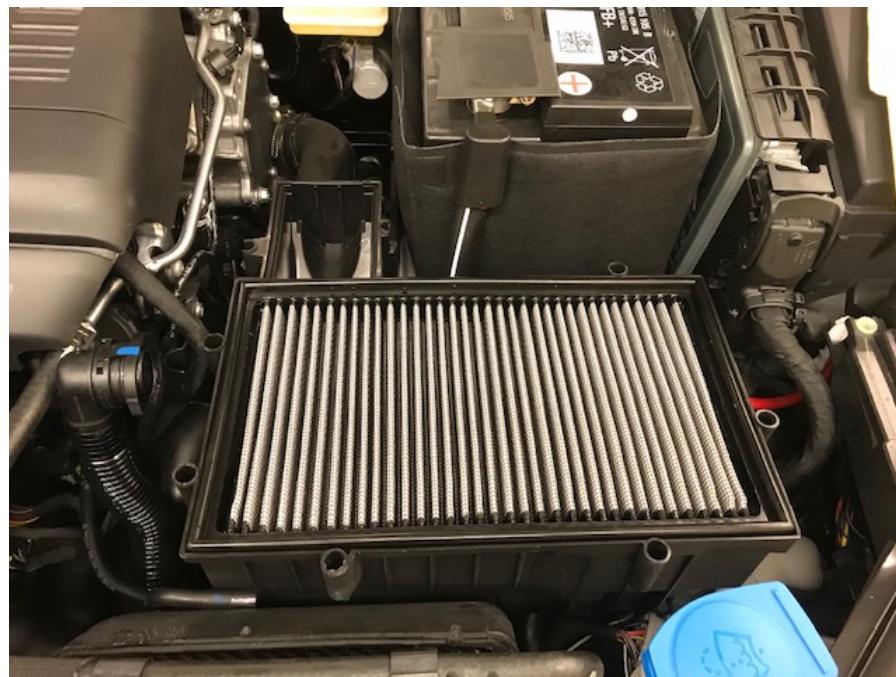

Step 12

Using hose clamp pliers (regular pliers can also work), remove stock intake tube from upper airbox.



Step 13

Re-install the upper airbox. Reconnecting the breather hose (Step 3), and if applicable, the CAI hose (Step 3a).

Torque the T25 Torx screws to 4NM.



Step 14

Install the 034Motorsport Turbo Inlet Hose. Using an 8mm socket, tighten both hose clamps to 4 **in/lbs**.



Step 15

Reinstall engine cover.



Step 16

Close the hood, and enjoy the performance of the 034Motorsport MQB Insuction Bundle!