

Q5/SQ5 Throttle Body Inlet Hose**034 MOTOR SPORT**

034Motorsport's Silicone Throttle Body Inlet Hose for the Audi Q5/SQ5 3.0 TFSI Supercharged V6 is designed to replace the restrictive corrugated plastic unit and integrated intake silencer and features a larger cross-sectional area and smooth insides for higher flow and increased performance.

**\*Be sure to clean out any intake related components to remove any possible contaminants.**

**Installation Spiciness Rating: MILD**

Installation of your Adjustable Front Upper Control Arms is a straightforward process that should take approximately 30 minutes to complete.

**Supplied Parts:**

- 034 Throttle body inlet hose
- Nylon vacuum barb fitting
- (2x) Hose clamps

**Tools Needed:**

- Flathead Screwdriver
- Pliers

Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

[customerservice@034motorsport.com](mailto:customerservice@034motorsport.com)

About This Guide

This Install Guide documents the installation process on an B8 Audi SQ5. There may be minor differences depending on specific vehicle, market, options, etc.

### Install Steps

#### Step 1

Open the hood to access the intake system.

#### Step 2

Unclip the fuel lines from the intake hose.



#### Step 3

Carefully unhook the small vent hose near the throttle body.  
Twisting it on the barb may break it loose.



#### Step 4

Using a hose clamp driver or flathead screwdriver, loosen the factory worm clamps at the throttle body and the airbox.




#### Step 5

Remove the factory throttle body hose.




#### Step 6

Install the 034Motorsport High-Flow Silicone Throttle Body Inlet Hose and tighten the supplied clamps.

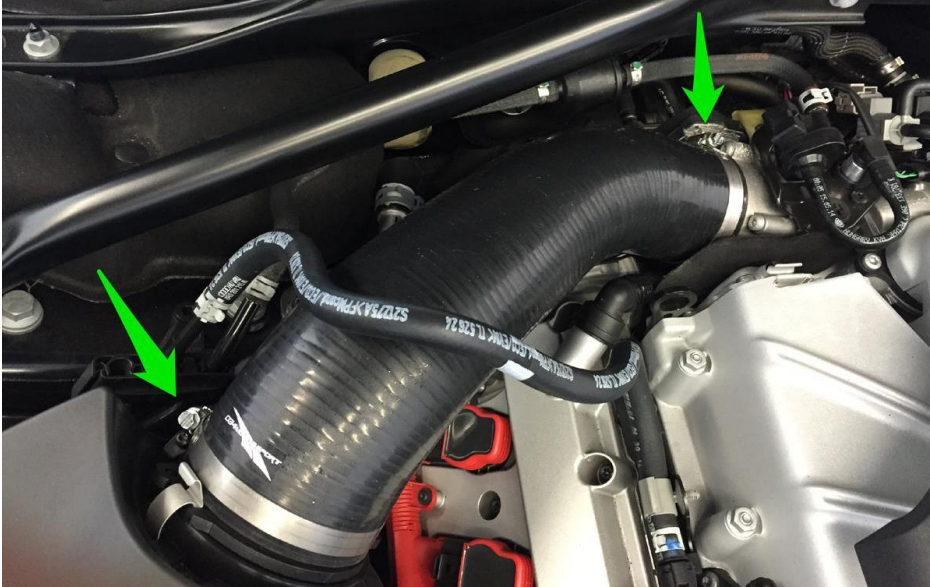

#### Step 7

Reinstall the small vent hose onto the supplied barb.

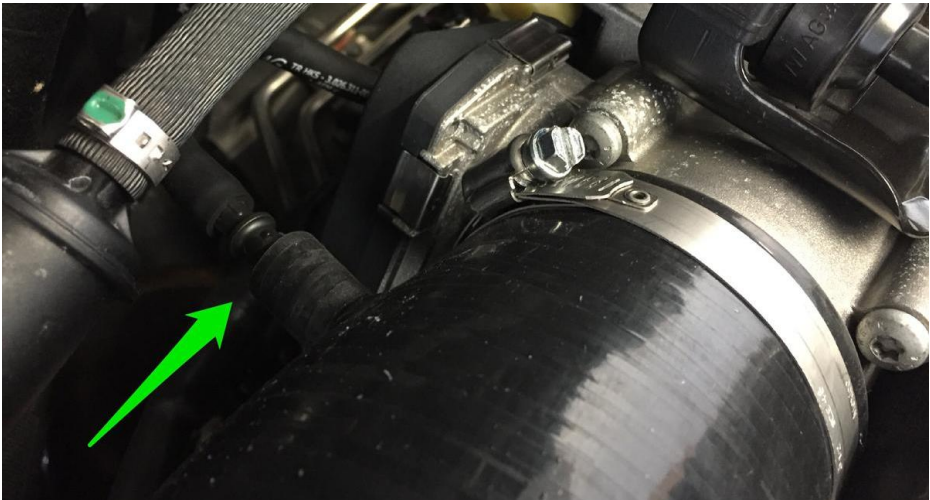

#### Step 8

You're all done! Marvel at your work and enjoy the improved performance and enhanced intake sound.

