

034Motorsport Billet Super Charger Bleeder Screws



034Motorsport's Billet Super Charger Bleeder Screws are the new standard in performance and durability. These bleeders were engineered with performance, and more importantly, strength, in mind. Manufactured from billet 304 Stainless Steel, for strength and long lasting reliability.

Installation Spiciness Rating



(Mild)

Installation of your 034Motorsport Billet S/C Bleeder Screws is a straightforward process that will take approximately 15 minutes to complete.

Supplied Parts:

- (2x) 034Motorsport Billet Stainless Steel Bleeder Screws

Tools Needed:

- No. 3 Phillips head screwdriver
- Socket – 7mm (or wrench)
- One thumb and adjacent finger

About This Guide

This Install Guide documents the installation process on a 2011 Audi S4. There may be minor differences in the engine bay of other 3.0T (supercharged) vehicles, depending on specific vehicle, market, options, etc.

Getting Started

- Ensure you have all parts and tools required for installation by reading the complete Install Guide.

Step 1

Open Hood



Step 2

Remove rear engine cover



Step 3

Using a No. 3 Phillips Head screwdriver, remove one of the stock plastic bleeder screws. Be careful not to break the head off, as old screws tend to be brittle.

If the Phillips head is stripped, you can heat up the end of the screwdriver with a torch and melt it into the head of the screw, holding it in place until it cools, thus reforming the "cross".

As long as the coolant reservoir cap is tight, you will lose minimal coolant during this procedure.




Step 4

Install the 034Motorsport Billet S/C Bleeder Screw.
Using a 7mm socket or wrench, torque to **3NM maximum**.
DO NOT OVER TORQUE!



Step 5

Repeat Steps 3 & 4 for the other screw.
Installed bleeder screws:

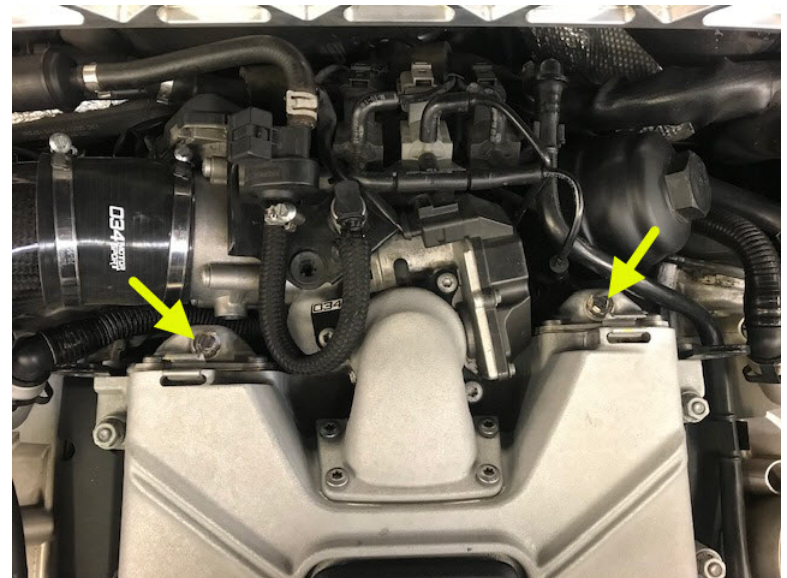

Step 6

Reinstall cover that was removed in Step 2.



Step 7

Close hood.

Step 8

Enjoy the Upgrade!