

[Carbon Fiber Battery Cover](#)**034** MOTOR  
SPORT

This high quality carbon fiber piece is designed to perfectly complement 034Motorsport's X34 Intake System, Engine Cover, and Fuse Box Cover for a true OEM+ engine bay appearance. The Carbon Fiber Battery Cover fits snugly over the factory battery blanket and is secured by magnets.

**Installation Spiciness Rating: MILD**

Installation of your 034Motorsport Carbon Fiber Battery Cover is a straightforward process that will take approximately 30 minutes to complete.

**Supplied Parts:**

- 034Motorsport Carbon Fiber Battery Cover
- Powder coated Steel Backing Plate
- (2x) Plastic Rivets

**Tools Needed:**

- Tape measure
- Wire clippers
- Sharp/Pointy tool

[About This Guide](#)

This Install Guide documents the installation process on a Mk7 VW Golf R. There may be minor differences depending on specific vehicle, market, options, etc.

## Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

[customerservice@034motorsport.com](mailto:customerservice@034motorsport.com)

## Install Steps

### Step 1

Open your hood to access the battery.

### Step 2

Open the box for the 034Motorsport Carbon Fiber Battery Cover and locate the plastic bag containing the backing plate and plastic rivets.




### Step 3

Measure 5.125" from the back of the battery to position the supplied backing plate correctly. **Important:** Measure from the back of the battery, not the back of the battery blanket!



### Step 4

With the backing plate properly located, use a Sharp/Pointy Object to pierce two holes in the factory battery blanket.

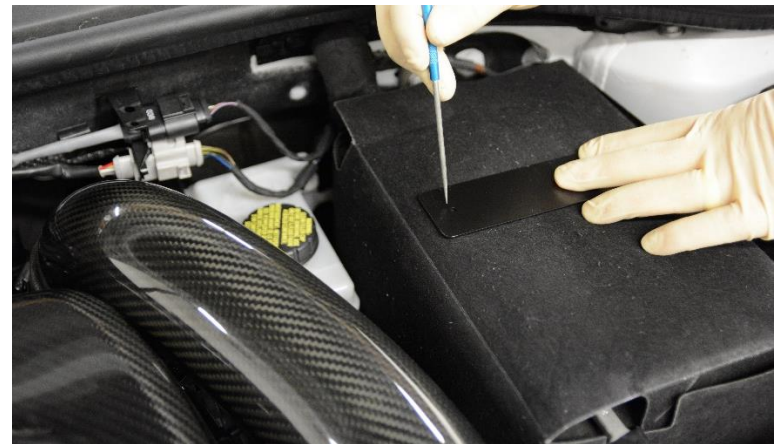




## Step 5

Insert the plastic rivets through the backing plate and factory battery blanket.



## Step 6

Secure both plastic rivets with the supplied clips.

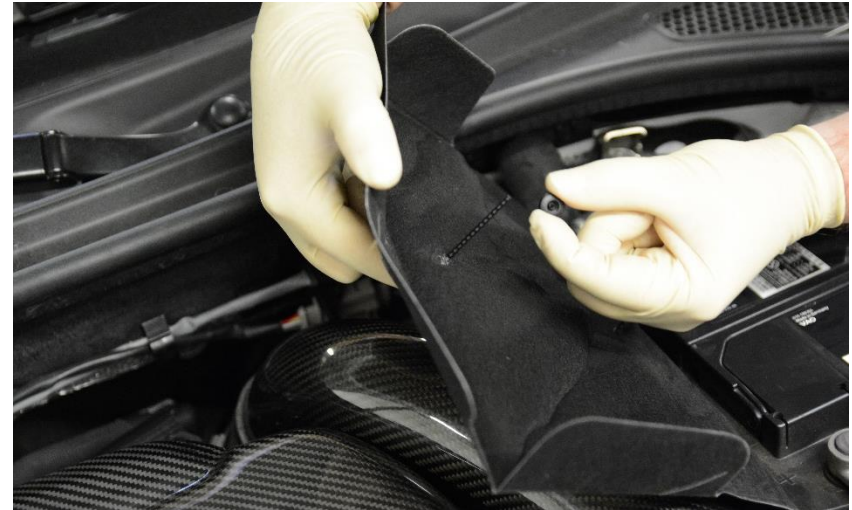

## Step 7

Ensure that the rivets are properly secured.




## Step 8

Trim the ends of the plastic rivets using wire cutters.



## Step 9

Reinstall the battery blanket.

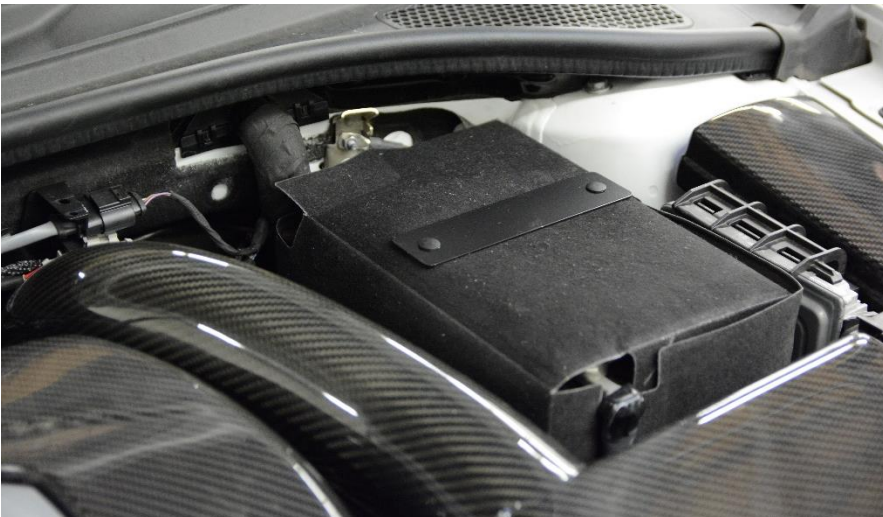

## Step 10

Properly orient the Carbon Fiber Battery Cover. **Important:** Ensure that there no exposed terminals or wires.



## Step 11

Carefully slip the Carbon Fiber Battery Cover into position over the battery blanket.





**Step 12**

Let the magnets do the rest. Marvel at your work!

