

[034Motorsport Carbon Fiber Radiator Cover, B9](#)**034** MOTOR SPORT

034Motorsport's Carbon Fiber Radiator Cover for the B9 chassis is the new standard in performance and durability. This cover was engineered with performance and great looks in mind. Manufactured from carbon fiber, for strength, light weight, and long lasting great looks.

Installation Spiciness Rating



(Mild)

Installation of your 034Motorsport Carbon Fiber Radiator for the Audi B9 is a straightforward process that will take approximately 2 minutes to complete.

Supplied Parts:

- 034Motorsport Carbon Fiber Radiator Cover

Tools Needed:

- One hand

About This Guide

This Install Guide documents the installation process on a 2018 Audi S4 with the [034Motorsport X34 Cold Air Intake](#). There may be minor differences depending on specific vehicle, market, options, etc.

Getting Started

- Ensure you have all parts and tools required for installation by reading the complete Install Guide.


Step 1

Open the hood and locate the hood release lever and radiator cover.




Step 2

Press the button on the back of the hood release lever, and pull off the lever.

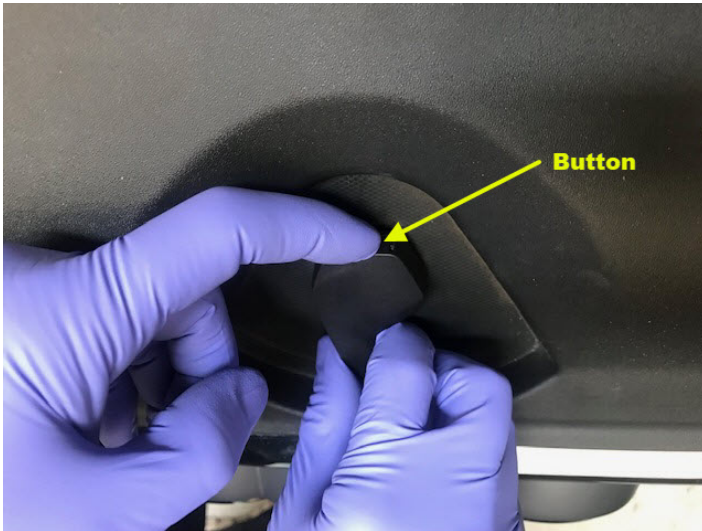

Step 3

Gently pry up on front edge of the radiator cover, and slide out of rear slot to remove.

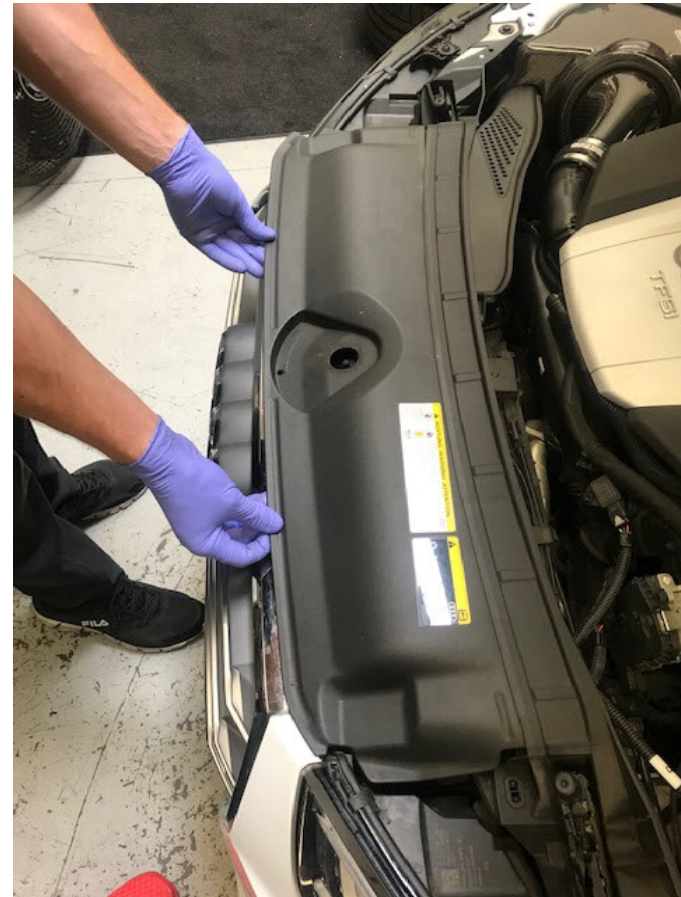

Step 4

Install 034Motorsport Carbon Fiber Radiator Cover by sliding it into the rear slot and snapping the front edge down. Be careful to align front tabs to avoid breakage when snapping in.

Reinstall the hood release lever, step back, and admire your work!

