

[X-Clear Driveshaft Tunnel Brace](#)**034 MOTOR SPORT**

This brace is designed to substantially increase rigidity over the factory unit, while adding an additional 15mm of clearance for aftermarket exhaust components.

Installation Spiciness Rating: MILD

Installation of your 034Motorsport X-Clear Brace is a straightforward process that will take approximately 30 minutes to complete.

Supplied Parts:

- 034 driveshaft tunnel brace
- (4x) M10x25mm bolts

Tools Needed:

- 12mm triple-square socket
- 8mm Allen bit
- Torque wrench

[About This Guide](#)

This Install Guide documents the installation process on a B9 Audi S4. There may be minor differences depending on specific vehicle, market, options, etc.

Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

customerservice@034motorsport.com

***Exhaust pipes may be hot! Let them cool off before starting the installation.**

Install Steps


Step 1

Lift the car to gain access to the underside.



Step 2

Using a 12mm triple-square, remove the factory hardware and set the brace aside.

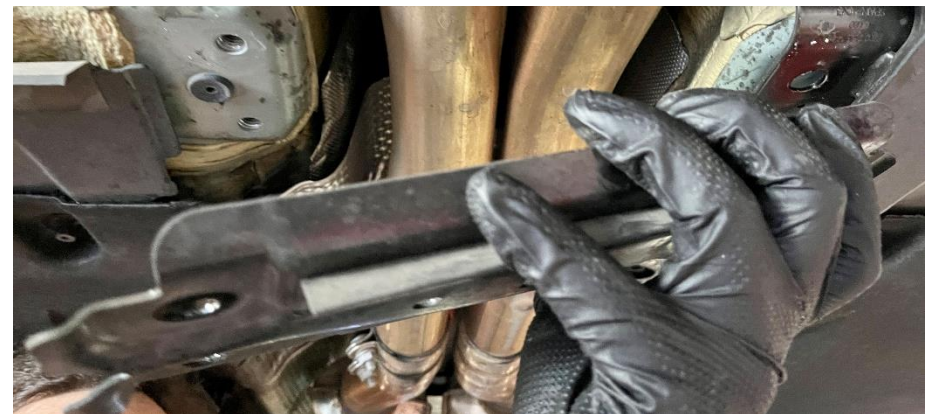

Step 3

Using an 8mm Allen bit, secure the 034 X-Clear into the factory location.



Step 4

Torque the provided hardware to **45 Nm**.



Step 5

Stand back and appreciate all the rigidity and exhaust pipe clearance you now have.



Step 6

Lower the car back down and enjoy!

