

**AWD MQB/EVO X-Clear Driveshaft Tunnel Brace****034 MOTOR SPORT**

The X-Clear Driveshaft Tunnel Brace is designed to increase clearance for aftermarket exhausts by replacing the shallow-fitting OEM tunnel brace. This allows for a larger diameter exhaust to be installed without causing excessive rattling or vibration.

**Installation Spiciness Rating: MILD**

Installation of your 034Motorsport X-Clear Brace is a straightforward process that will take approximately 30 minutes to complete.

**Supplied Parts:**

- 034 Driveshaft tunnel brace
- (4x) M8 nuts

**Tools Needed:**

- 12mm Socket
- 10mm Socket
- Torque wrench

About This Guide

This Install Guide documents the installation process on an 8Y Audi S3. There may be minor differences depending on specific vehicle, market, options, etc.

Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:


[customerservice@034motorsport.com](mailto:customerservice@034motorsport.com)

**\*Exhaust pipes may be hot! Let them cool off before starting the installation.**

### Install Steps

#### Step 1

Lift the car to gain access to the underside.

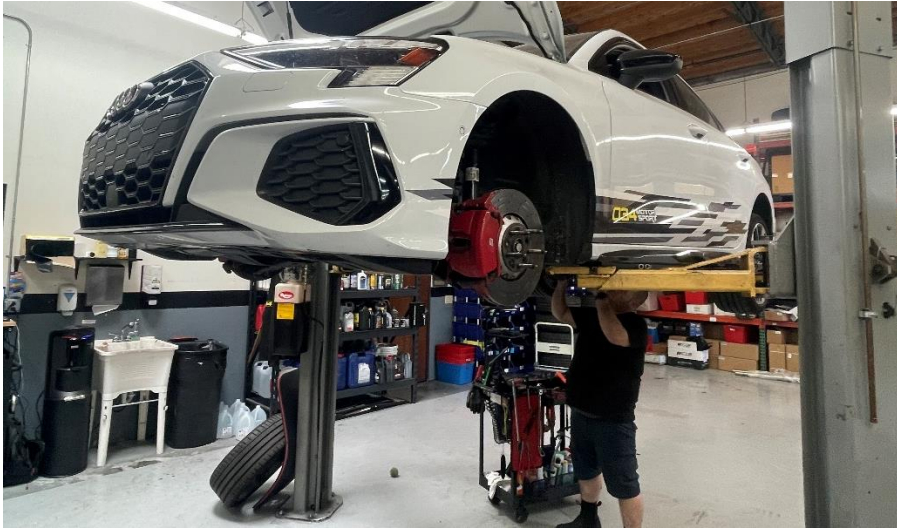

#### Step 2

Using a 10mm socket, loosen the hardware for the belly pan, near the factory chassis brace.



#### Step 3

Using a 12mm socket, remove the hardware securing the factory chassis brace to the chassis.



#### Step 4

Remove the factory chassis brace.



#### Step 5

Install the 034 X-Clear chassis brace.




#### Step 6

Using a 12mm socket, reinstall the hardware securing the factory chassis brace to the chassis.




#### Step 7

Torque the hardware to **20Nm**.

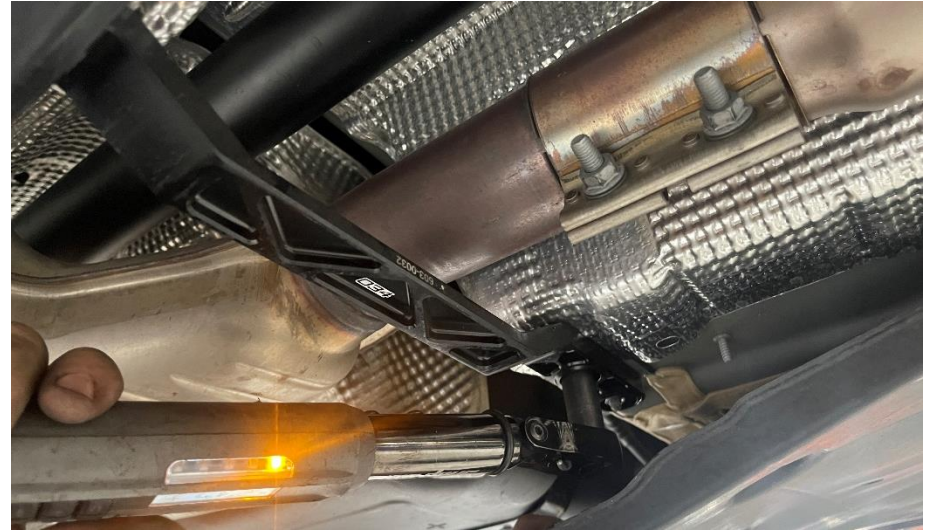

#### Step 8

Using a 10mm socket, reinstall the hardware for the belly pan, near the factory chassis brace.

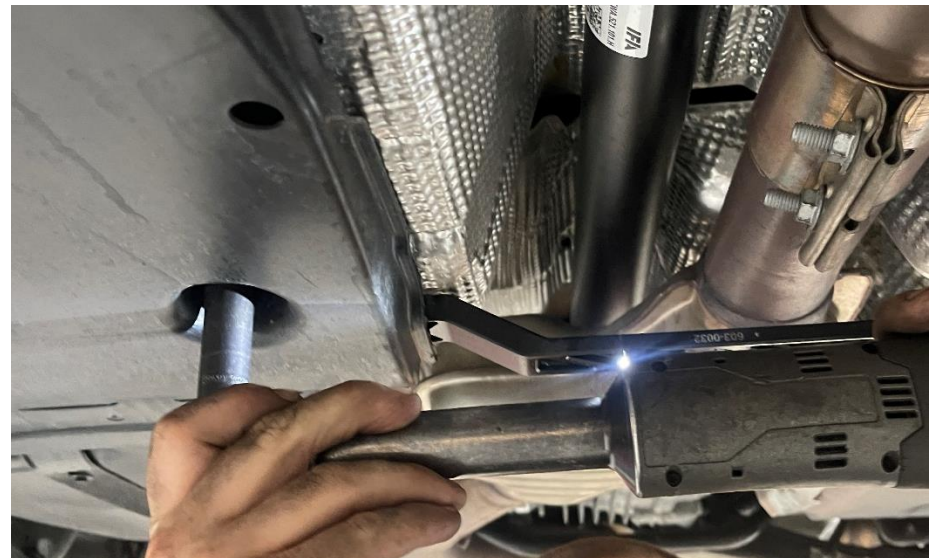

## Step 9

Stand back and appreciate all the rigidity and exhaust pipe clearance you now have.



## Step 10

Lower the car back down and enjoy!

