



[034Motorsport Adjustable Rear Sway Bar End Links, B9 Audi A4/S4, A5/S5, Allroad](#)



Supplied Parts:

- 034Motorsport Adjustable Rear Sway Bar End Links for B9 Audi A4/S4, A5/S5, and Allroad
- 034Motorsport Billet Stainless Steel Heim Joint Spacers

Tools Needed:


- 16mm Wrench
- Another 16mm Wrench
- Torque Wrench
- Lift, Ramps, or Jackstands

034Motorsport B9 Audi Adjustable Rear Sway Bar End Links replace the factory rubber bushings and increase the effectiveness of the rear sway bar while allowing for preload adjustment, improving handling feel and performance.

Installation of your 034Motorsport Adjustable Rear Sway Bar End Link Pair is a straightforward process that will take about one hour to complete. These installation instructions follow a step-by-step procedure on how to replace 1 end link. Simply follow steps 1 through 11 again to install the end link pair.

Step 0 – Raise the vehicle securely using a lift, jackstands, or ramps in order to access the rear sway bar.

Step 1 – Identify the upper and lower bolts securing the rear sway bar end link from the rear control arm to the rear sway bar.

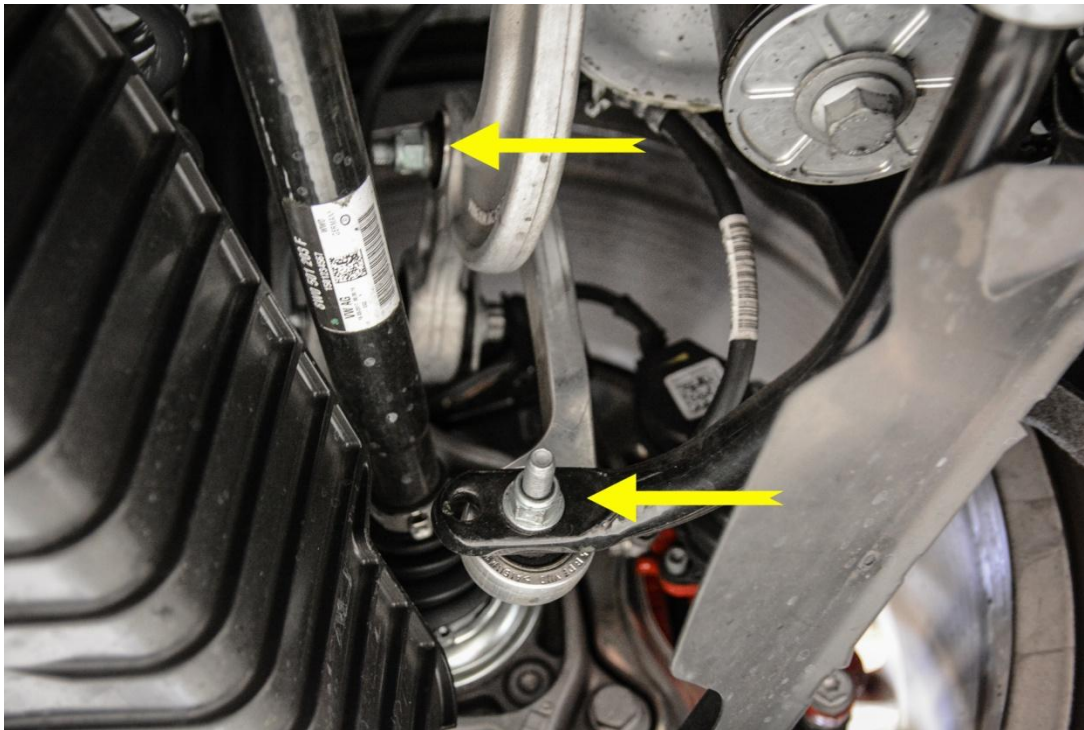

Step 2 – Using 2 16mm wrenches, loosen and remove the lower nut securing the rear end link to the rear sway bar.



Step 3 – With the same 2 16mm wrenches, loosen and remove the upper nut securing the sway bar end link to the rear control arm.



Step 4 – Remove the lower bolt from the bottom of the rear sway bar end link and set to the side. This will be needed when installing the 034Motorsport Adjustable Rear Sway Bar End Link.



Step 5 – Slide the upper end link bolt free from the rear control arm. You should now be able to completely remove the rear sway bar end link from the vehicle. Set the factory bolt to the side, as this will be used when installing the 034Motorsport Adjustable Rear Sway Bar End Link.




Step 6 – Marvel at the beauty of your new 034Motorsport Adjustable Rear Sway Bar End Links compared to the factory cast units.




Step 7 –Orient the 034Motorsport Adjustable Rear Sway Bar End Link so that the logo faces forward, and the heim joint and spacers are on the bottom. Pre-install factory upper end link bolt through the 034Motorsport Adjustable Rear Sway Bar End Link, orienting the bolt from the front of the vehicle to the back.



Step 8 – Slide the bolt through the rear control arm and loosely install the upper factory nut to hold the end link in place.

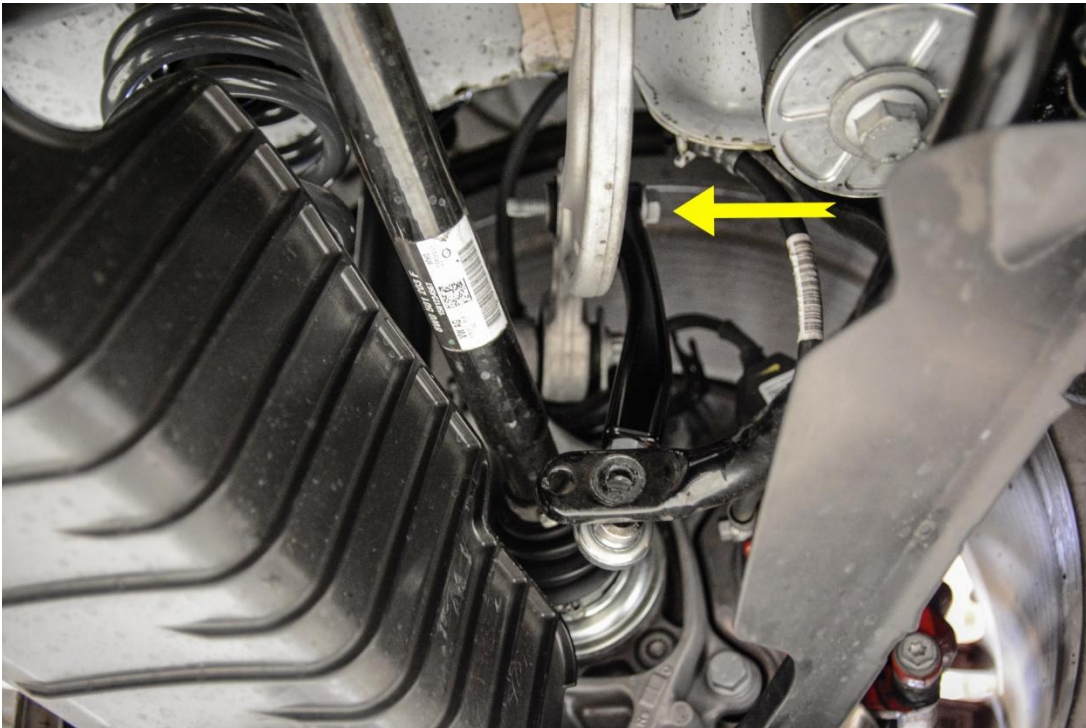

Step 9 – Using the factory hardware, slide the lower bolt through the heim joint of the 034Motorsport Adjustable Rear End Link and then the sway bar, orienting the bolt from the outside of the vehicle toward the center. Loosely install the factory nut to the lower end link bolt.

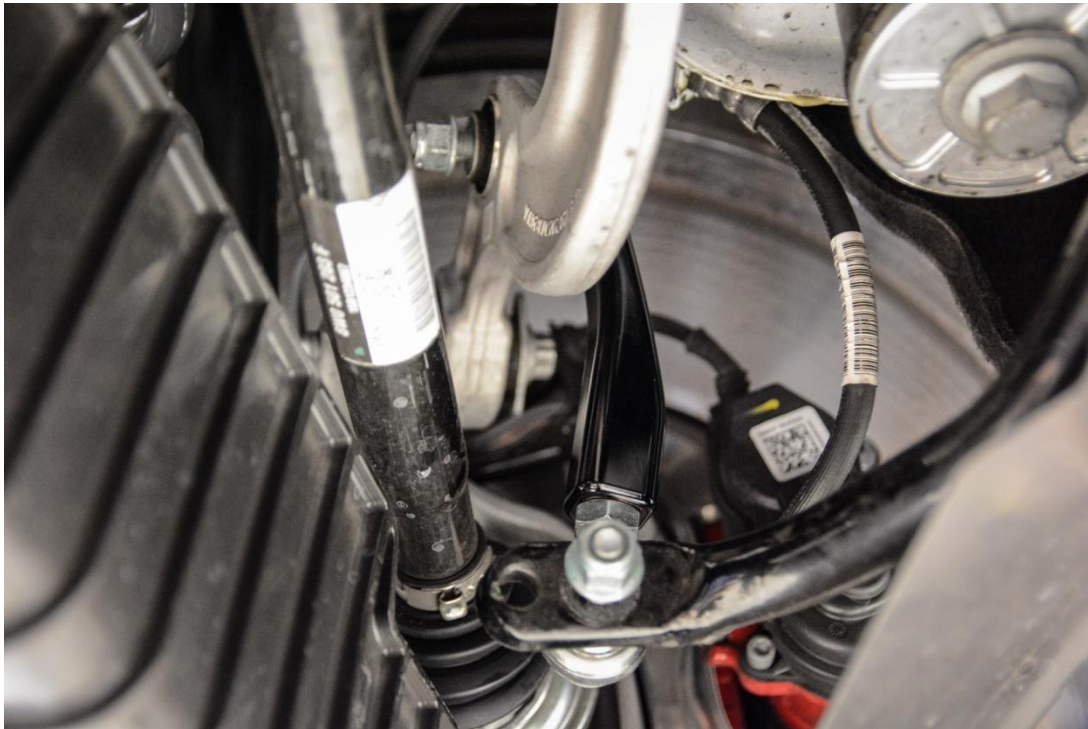

Step 10 – Using 2 16mm wrenches, tighten the 034Motorsport Adjustable Rear End Link to the rear sway bar. Torque to **40Nm + 180 Degrees**.



Step 11 – Compress suspension to static ride height. Using 2 16mm wrenches, tighten the 034Motorsport Adjustable Rear End Link to the rear control arm. Torque to **40Nm + 180 Degrees**. **Note:** Upper bolts should be tightened with the vehicle at static ride height!



Step 12 - Check all hardware to ensure that everything is tight. You're done!